SAFETY KNIFE BLADE REPLACEMENT (SK-14)

(Uses SKB-2S-R Blade)



Step 1. To remove blade, slide the blade slider forward to align arrows on frame with notch on blade (Figure 1).

Step 2. Carefully lift the blade slider up to disengage the used blade.

Step 3. Carefully remove blade. Reverse blade to use fresh cutting edge, or replace with new blade. Dispose of old blades in an approved container.

Step 4. Carefully insert a new blade into the blade channel. Align notch on blade with arrows on frame.

Step 5. Extend the blade slider about ¼" and lower it into the channel opening.


When the slider and blade are engaged, the knife is ready for use.


Note: Do not over extend the blade slider.

Note: For left-handed use, flip blade upside down.



Figure 1

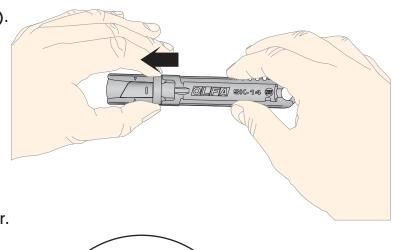

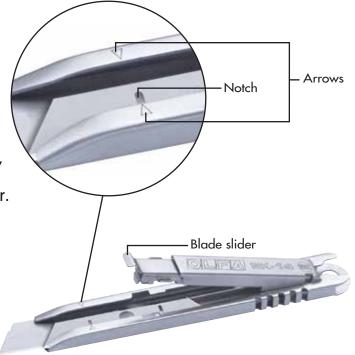

CLEANING INSTRUCTIONS (SK-14)

(Uses SKB-2S-R Blade)



SKB-2S

SKB-2S-R



- Step 1. Remove blade by sliding the bladeslider forward to align arrows on frame with notch on blade. Lift blade slider and remove blade.
- Step 2. Dilute detergent solution of sodium hypochlorite (100ppm) and immerse cutter in detergent for up to 5 minutes.
- Step 3. Remove cutter from solution and rinse well under running water.
- Step 4. After washing, dry cutter thoroughly.



